

Replacing GFI

Date Issued: 1/1/2011

Date Updated: 2/21/2012

Description: This TSB will walk you through replacing the GFI.



1. Remove cable from GFI



Remove the bottom plate by removing the 2 screws located as indicated by the arrows.



Loosen the two screws holding down the main cable clamp.



Loosen the 3 terminal screws holding each wire in. Note: Remember the color pattern. Black (left – hot), White (middle – neutral), Green (right – ground).



Lift the gasket and pull the cable out of the GFI.

2. Place the cable into the new GFI



With the cable free you can place it into the new GFI. Note: If needed, you can loosen the terminal screws to make inserting the wires easier.



Secure the cable by placing the bare wire into the terminal and tightening the screw down.



Replace the cover and tighten the screws.

<u>Tools/Parts Needed:</u>	<u>Quantity:</u>	<u>Parts Catalog Number:</u>
Phillips or flathead screwdriver	1	DVD-99-088-00
QLM Presence Sensor	1	DVD-01-112-00
QLM Presence Sensor Screws	2	DVD-50-040-00
1/8" Hex Head Driver	1	DVD-99-083-00
QLM Tool	1	DVD-99-034-00
QLM Insert Switch Cable	1	DVD-40-047-02
Jeweler Screwdriver	1	DVD-99-091-00

<u>Associated TSB's:</u>	TSB00-0000 – TSB name here
---------------------------------	----------------------------

<u>Owner:</u>	<u>Department:</u>
Created by: Eric VanOvermeiren	Machine Support
Published by: Elric Zufan	Machine Support

<u>Revision #:</u>	<u>Date:</u>	<u>Description:</u>
1.0.0	5/5/2011	Original release
1.1.0	2/21/2012	Updated to new template